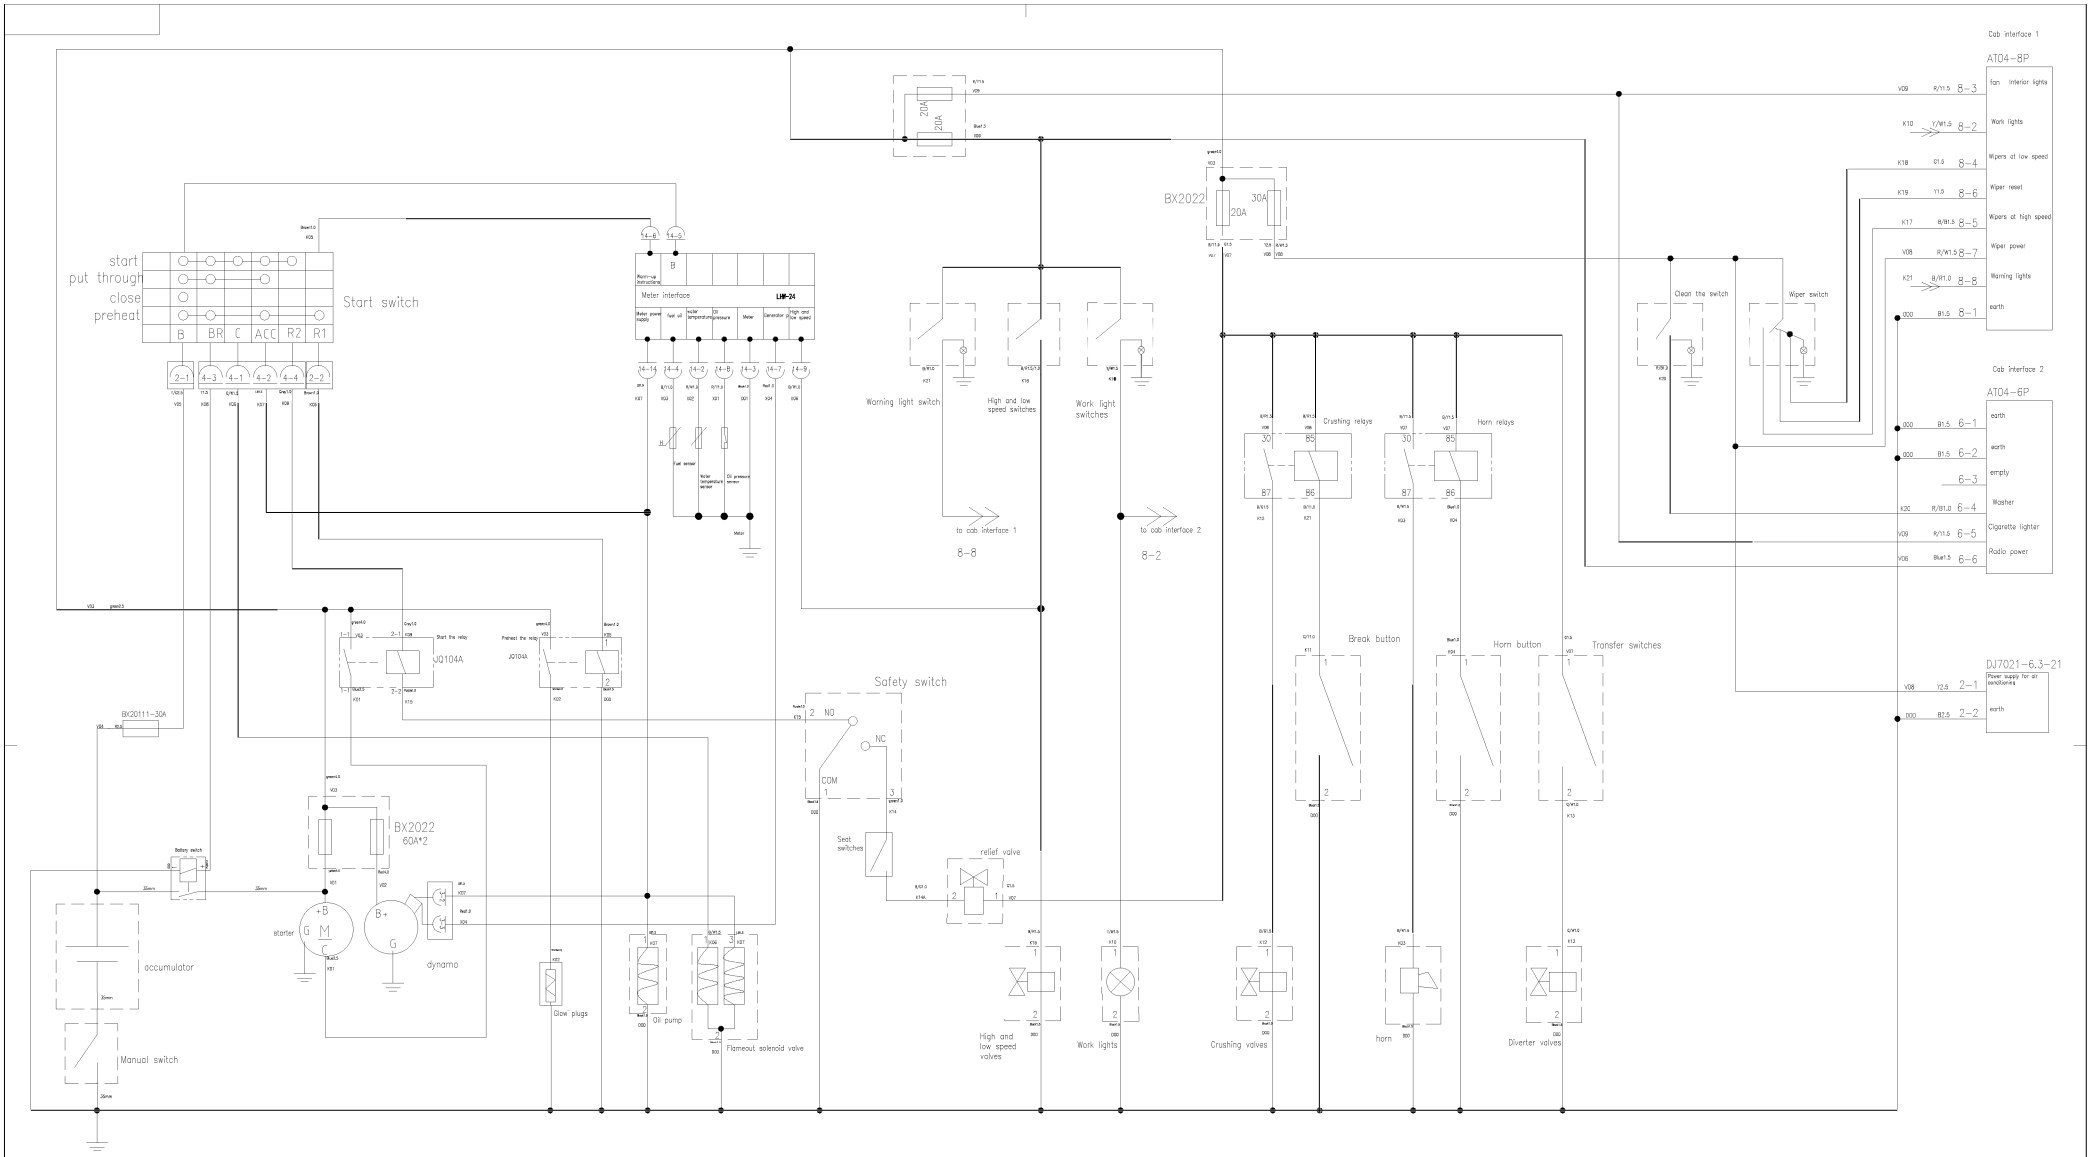
Cab interface 1
AT04-8P
fan
interior lights
Work lights
Wipers at low speed
Wiper reset
Wipers at high speed
Wiper power
Warning lights
earth
Cab interface 2
AT04-6P
earth
earth
empty
Washer
Cigarette lighter
Radio power
DJ7021-6.3-21
Power supply for air conditioning
earth
start
put through
close
preheat
B
BR
C
ACC
R2
R1
Start switch
Meter interface
LHM-24
Warning light switch
High and low speed switches
Work light switches
to cab interface 1
8-8
to cab interface 2
8-2
BX2022
20A
30A
Clean the switch
Wiper switch
Crushing relays
Horn relays
Break button
Horn button
Transfer switches
BX20111-30A
Start the relay
JQ104A
Preheat the relay
JQ104A
Safety switch
NO
NC
COM
Seat switches
relief valve
BX2022
60A*2
accumulator
starter
dynamo
Glow plugs
Oil pump
Flameout solenoid valve
Manual switch
High and low speed valves
Work lights
Crushing valves
horn
Diverter valves
Electrical schematic diagram
1:1
20230804